INSTRUCTIONS MANUAL

PLEASE READ THIS MANUAL CAREFULLY BEFORE USING AND KEEP IT PROPERLY FOR FUTURE REFERENCE

MODEL NO. R-181

General Description

1.Power cord 2.Cord rewinder release button 3.Suction power slider 4.On/off switch 5.Carry handle 6.Dust full indicator 7.Lock pin 8.Front cover 9.Low house 10.Big wheel 11.Tube 12.Floor brush 13.Integrated brush and nozzle 14.Hose

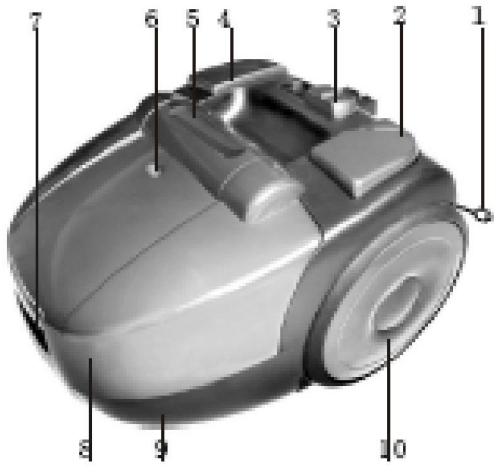

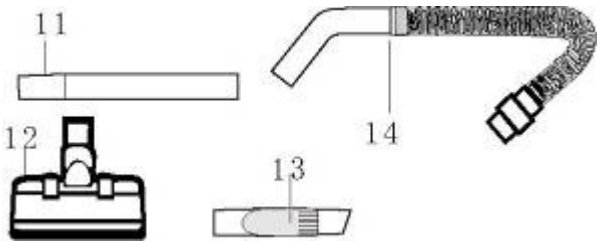

Important

Read this user manual carefully before you use the appliance and save it for future reference
-Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
-Do not use the appliance if the plug, the cord or the appliance itself is damage.
-If the mains cord of this appliance is damaged, you must have it replaced in order to avoid a hazard
- Keep the appliance out of the reach of children.
-Never suck up water or any other liquid,never suck up flammable substances and do not suck up ashes until they are cold.
-Do not point the hose,the tube or any other accessory at the eyes or ears nor put it in your mouth when it is connected to the vacuum cleaner and vacuum cleaner is switched on.
-When you use the appliance to vacuum ashes,fine sand,lime cement dust and similar substance, the pores of the paper dust bag become clogged,as a result,the dust bag full indicator will indicate that the dust bag is full,replace the dust bag,even if is not full yet.
-Never use the appliance without the motor protection filter.this damages the motor and shortens the life of the appliance.
-Never use this appliance without a dust bag.

Preparing for use

Hose
To connect the hose,push it into the appliance and turn it clockwise.to disconnect the hose,turn it anticlockwise and pull it out of the appliance.
Telescopic tube

-Press the spring loaded lock button on the telescopic tube part and slide the lock buttoninto the opening in the other tube part.
-Connect the telescopic tube part to the handgrip of the hose,insert the narrow section in-to the wider section and turn a little. -Adjust the telescopic tube to the length of you find most comfortable during vacuumming.
Push the slide on the tube upwards and push the lower tube part downwards or pull it up-wards.

Floor brush

-you can use the floor brush on the carpet or on the hard floors.
-To clean hard floors, push the rocker switch on top of the floor brush with your foot tomake the brush strips come out of the brush housing.
-to clean carpet,push the rocker switch on the other side to make the brush strips dis-appear into the housing.

Integrate brush & nozzle

-your vacuum cleaner comes with one of this accessories.
-connect the integrate brush and nozzle directly to the handgrip or to the tube.
1.use the crevice nozzle to vacuum the small area or clean narrow corners or hard-to-reach places.

2.Use the brush nozzle to clean computers,bookshelves etc.

Using the appliance

Vacuum Cleaning

-you can carry the vacuum cleaner by the handle at the front or on top of the appliance.
1 Pull the cord out of the appliance and insert the mains plug into the wall socket.
2 Press the On/off button on top of the appliance with your foot or switch on the appliance.

Adusting suction power

You can adjust the suction power with the suction power control on the vacuum cleaner

Replacement

Replacing the dust bag

Always unplug the applicance before you replace the dust bag.
When the indicator light goes red, then it is time to change the dust bag.

- Lift the bag compartment by pushing the relevan lever outwards.
- Remove the bag after first pressing the special stop lever
- Take out the bag, being carefull not to tear it.
- Insert the new bag by sliding the stiff card section in along the guides.
- Close the dust compartment lid.

Replacing the motor filter
Always unplug the appliance before you replace a filter.
Your vacuum cleaner is equipped with the motor protecting filter.replace the filter once a year.
1.open the cover and pull the filter out of the appliance.
2. Insert a new filter into the holder.

Cleaning

Always switch off and unplug the appliance before you clean any parts.
Do not clean any part of the vacuum cleaner in the dishwasher,if neccessary,clean theparts with a moist cloth.
-Clean the appliance with a damp cloth.

Storage

1.Switch off the appliance and remove the mains plug from the wall socket.
2.Press the cord rewind button to rewind the cord.
3.you can storage the appliance in 2 ways:
horizontal and vertical parking position

Troubleshooting

The suction power is insufficient
-perhaps the dust bag is full.
If neccessary, replace the dust bag.
-perhaps the filters need to be replaced.
If neccessary, replace the filters.
-perhaps the suction power slide on the handgrip is open.
Close the slide.
-perhaps the electronic suction power control(specific types only) has been set to a low setting.
Set the control to a higher setting.
-perhaps the floor brush, nozzle tube or hose is blocked up.
To remove the obstruction, disconnect the block up item and try to clean it.

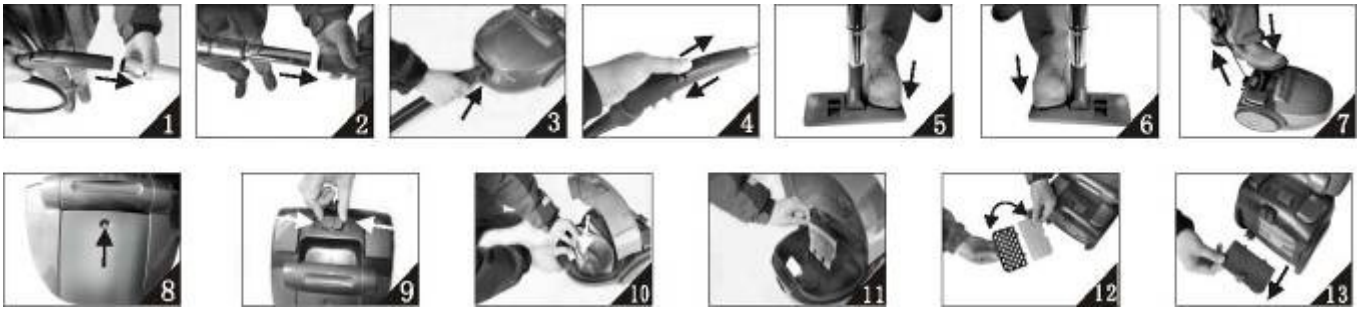

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste.
It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.
Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving form inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.